


5 doors / 5 seats / 7 seats / Station wagon (2025 - )









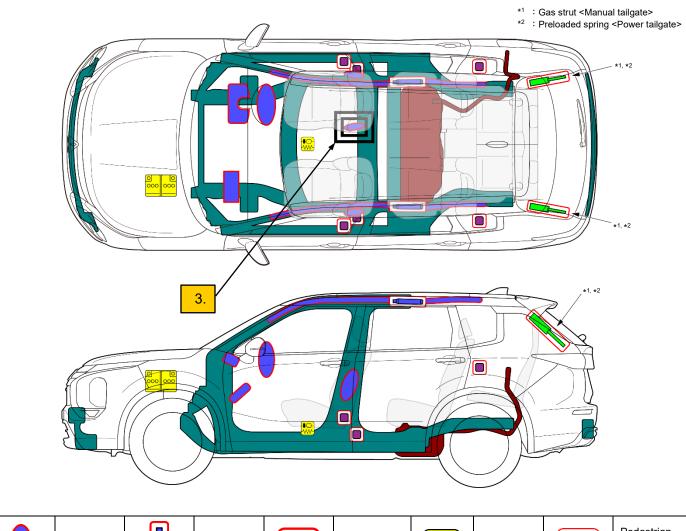

	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		Pedestrian protection active system
3	Automatic rollover protection system		Gas strut / Preloaded spring		High strength Zone		Zone requiring special attention		
000 000	Battery low voltage	HH	Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack	1	High voltage power cable / component	0	High voltage disconnect	0	Fuse box disabling high voltage system	4	Ultra capacitor, high voltage
			ID No.		Version No		n Date.	Page 1/4	
			GMW-ANRS-EN04		01	04/202	04/2025		




5 doors / 5 seats / 7 seats / Station wagon (2025 - )






### 1. Identification / recognition

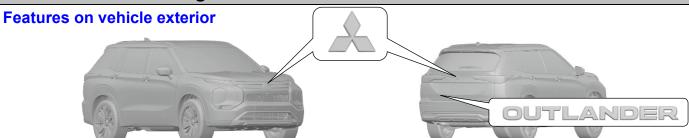


### 2. Immobilisation / stabilization / lifting

#### Immobilize the vehicle

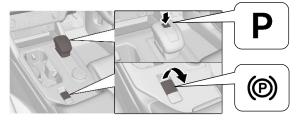

Block the wheels and set the parking brake. Put the car in "P" position.

### Support positions for Jack and Lift

 

- O: Support position for Garage Jack
- O: Support position for Jack or Axle stands or Lift


### 3. Disable direct hazards / safety regulations
 
### How to determine if vehicle is ON / OFF




Check that the illumination of the "combination meter" is off.

When the power switch is "ON", "combination meter" light up.



### How to disconnect the 12V battery negative terminal

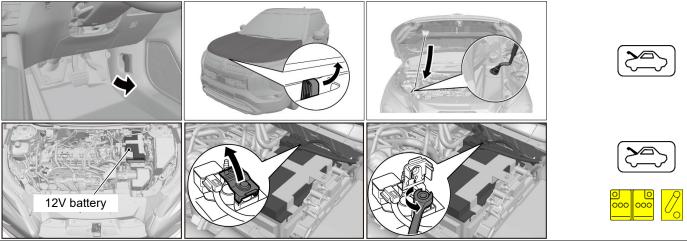



Do not apply excessive force to not strongly hit the airbag installation area.

Driver's seat has a Front seat-mounted SRS centre airbag in addition to the side airbag. Location of far side airbag is shown in the mark on page 1.

	ID No.	Version No.	Version Date.	Page
	GMW-ANRS-EN04	01	04/2025	2/4






5 doors / 5 seats / 7 seats / Station wagon (2025 - )





### 4. Access to the occupants

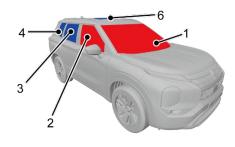




1-2: Laminated glass

3 - 6: Tempered glass

### **Steering adjustment**

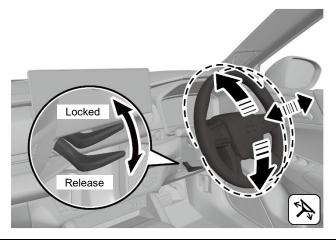

### Seat adjustment




#### **Power Seat**


- 1 : Forward or backward
- 2 : Recline the seatback
- 3 : Seat tilt
- 4 : Seat height
- 5 : Lumbar support

#### **Manual Seat**

- 1: Forward or backward
- 2: Recline the seatback
- 3 : Seat height (driver's side only)

## High-tensile and Ultra-high-tensile steel panels location

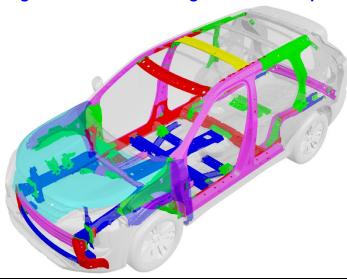

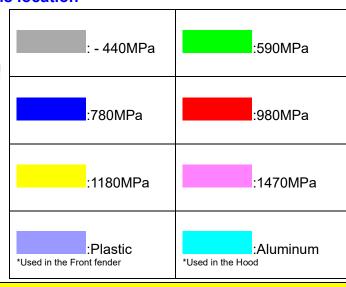

# 5. Stored energy / liquids / gases / solids

#### Fluids / gases used in this vehicle

	Fuel tank	55 liters	≉	Refrigerant (air conditioner)	HFO-1234yf(R-1234yf): 550g
000 000	12V Battery	L3-EFB 70 Ah		Hood	Aluminum



ID No.	Version No.	Version Date.	Page
GMW-ANRS-EN04	01	04/2025	3/4



5 doors / 5 seats / 7 seats / Station wagon (2025 - )





### 6. In case of fire



Use large amount of water















**RE-IGNITION POSSIBLE!** 



Never use seawater or any water containing salt.

### 7. In case of submersion

### **Submerged Vehicle**

· If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.


### 8. Towing / transportation / storage

### **How to Transport**



Store the vehicle at a safe distance from other vehicles.

## 9. Important additional information

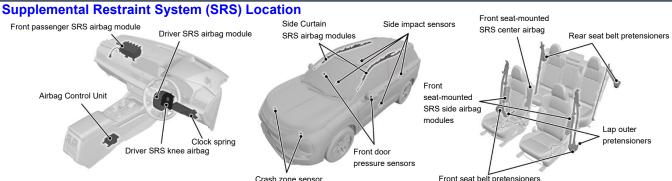

Clasif zone Serisor Front Seat Det Pretensioners									
10. Explanation of pictograms used									
	Keyless operation key distance		Device to shut down po vehicle	wer in		•	Risk of damaging	human health	
	Caution	*	Warning, low temperatu	Warning, low temperature		•	Risk of flammability		
	Open Hood	*	Air-conditioning compor	Air-conditioning component		•	Risk of an explosion		
	Fuel tank	(ASP)	Use water to extinguish	Use water to extinguish the fire		•	Risk of corrosive resubstances	naterial /	
<b></b> ;	Seat height adjustment	adjustment 🔊		Steering wheel, tilt control		•	Risk of acute toxicity		
	Seat adjustment, longitudinal		Right hand drive		□ IR SS		Use thermal infrare	ed camera	
			ID No.	Version No.		Ve	ersion Date.	Page	
			GMW-ANRS-EN04	01		04/2025		4/4	