





MITSUBISHI TRITON
4 doors / 5 seats / Double Cab
(2026 -)

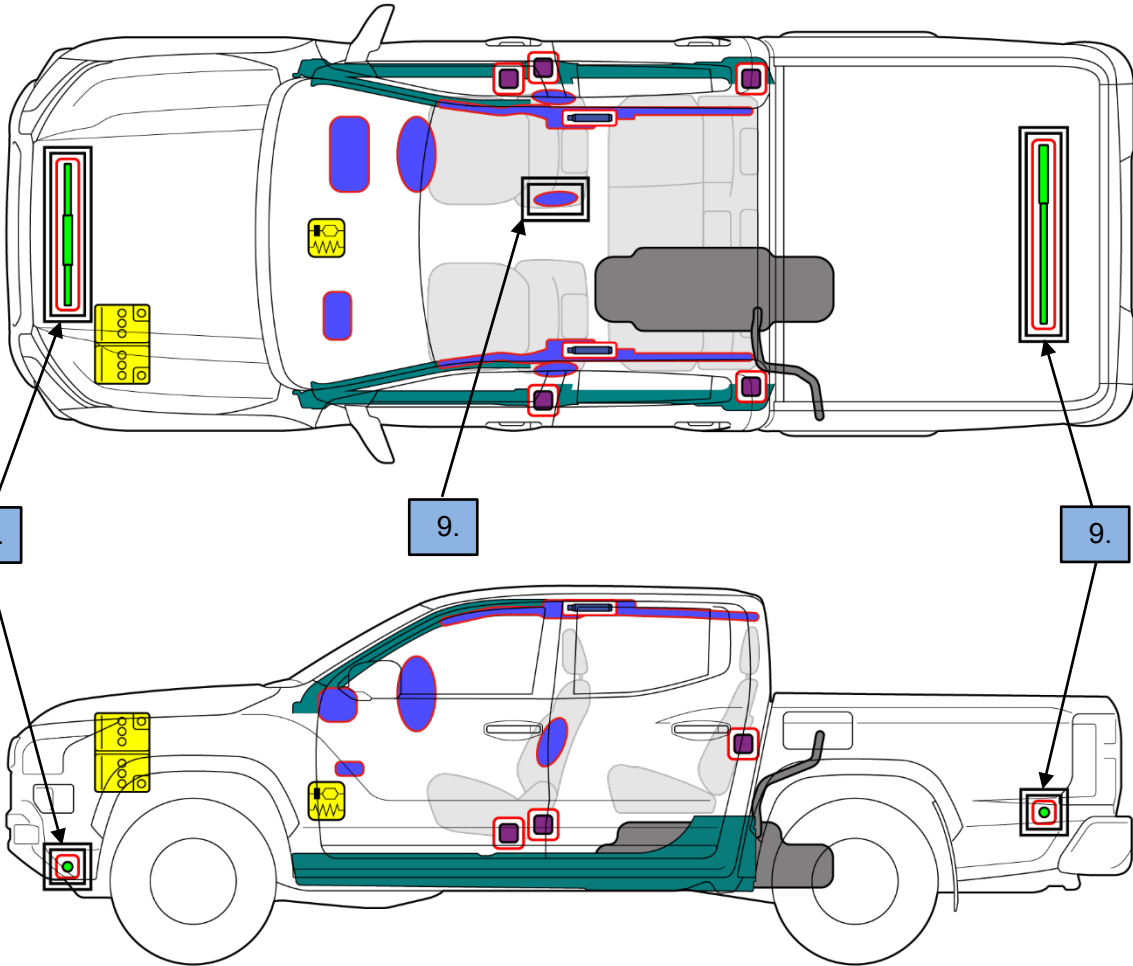


	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		High strength Zone
	Zone requiring special attention		Battery low voltage		Fuel tank		Fuel tank content Diesel		Gas strut / Preloaded spring
ID No. LBLCTDC-ANRS-EN03				Version No. 01		Version Date. 2/2026		Page 1/4	

1. Identification / recognition

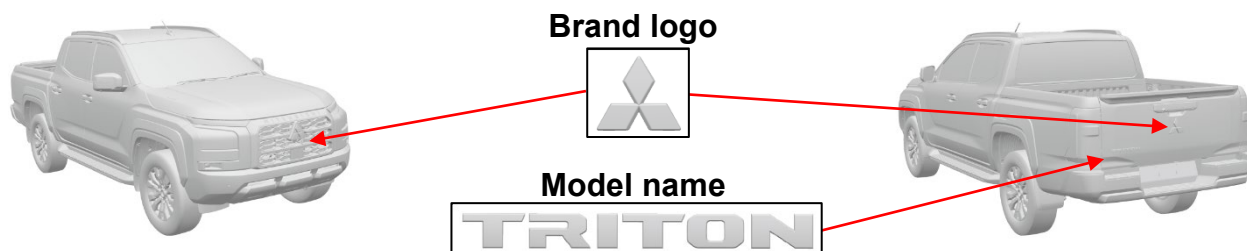


2. Immobilisation / stabilization / lifting


Immobilise the vehicle:

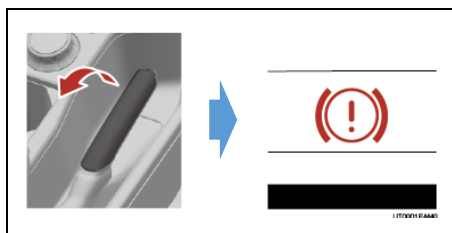

1. Block the wheels.
2. Set the parking brake.

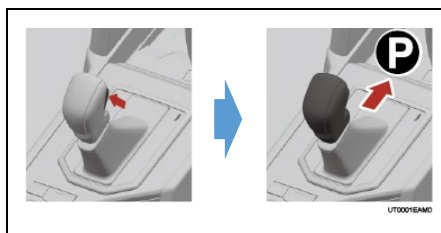


3. Automatic transmission:
Move the selector to the "P" position.

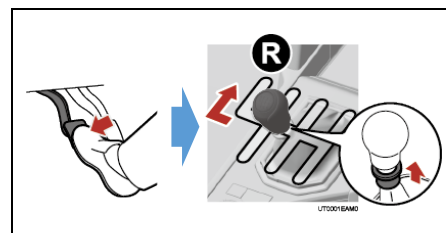


3. Manual transmission:
Move the gearshift to the "R" position.

Lifting points:


Front jacking points

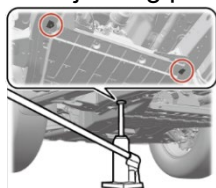

Rear jacking points

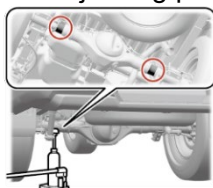


Appropriate stabilisation-lifting points
 Support positions for garage jacks

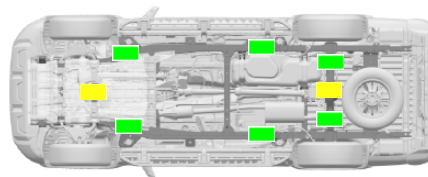

3. Disable direct hazards / safety regulations

Main disabling method:

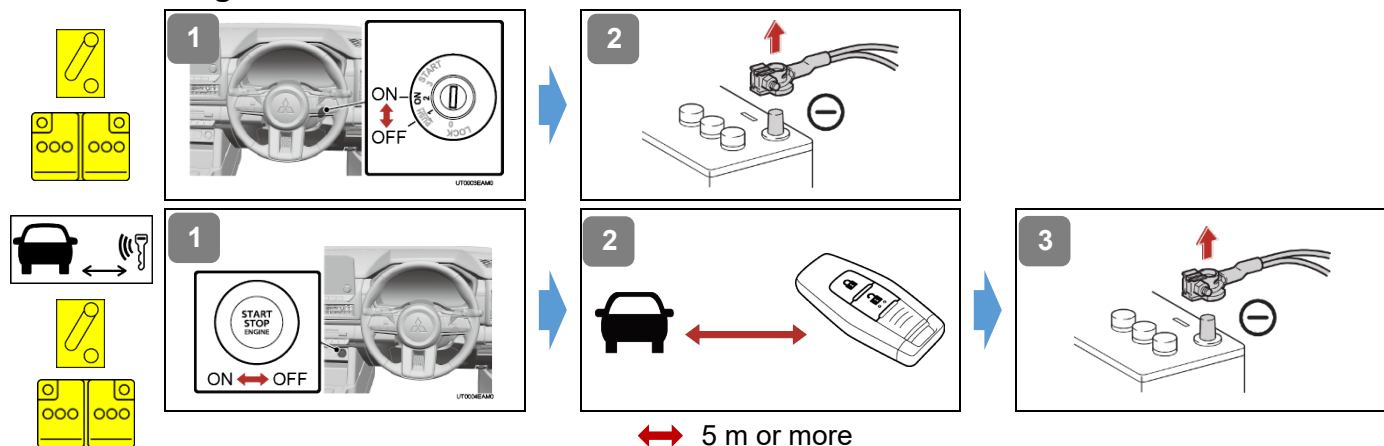

Access:




	ID No.	Version No.	Version Date.	Page
	LBLCTDC-ANRS-EN03	01	2/2026	2/4

4. Access to the occupants

Glass types:

A: Laminated glass

B: Tempered glass

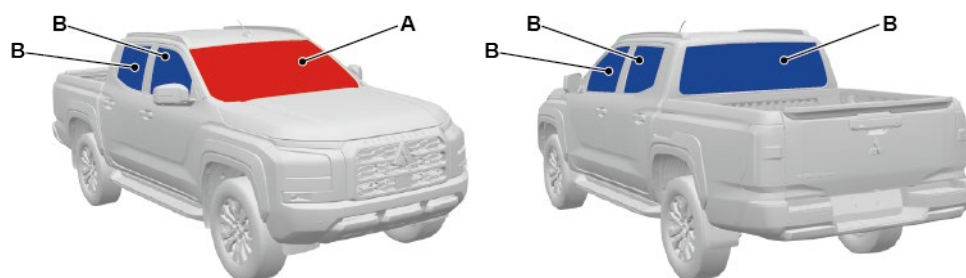

UTDC00004EAM0

Seat adjustment:

Manual Seat



Recline the seatback




Power Seat




Recline the seatback




Steering column adjustment:

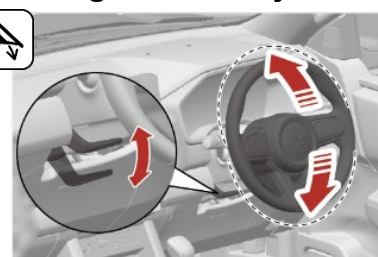

Telescopic mechanism

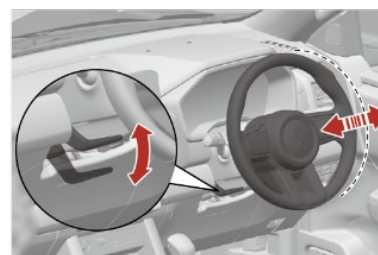

High strength steel in body:

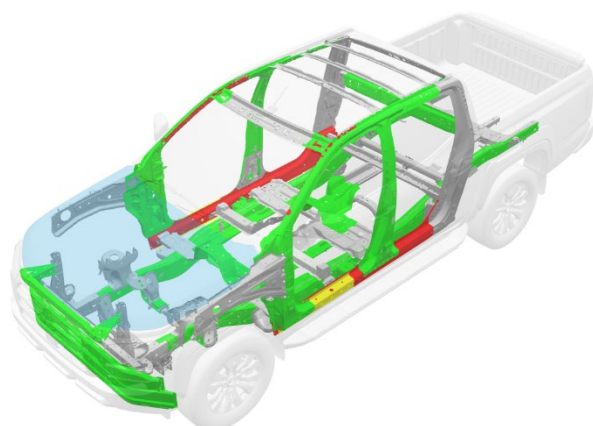

UTDC00004EAM0

— 440 MPa

— 590 MPa

— 980 MPa

— 1180 MPa

— Aluminum

Used in the hood (4WD vehicles only)

5. Stored energy / liquids / gases / solids

		12 V
		HFC-134a: 530–570 g HFO-1234yf [R-1234yf]: 530–570 g
		75 L

	ID No.	Version No.	Version Date.	Page
	LBLCTDC-ANRS-EN03	01	2/2026	3/4

6. In case of fire



Use large amount of water



7. In case of submersion




Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage


Store at safe distance from other vehicles!

2WD

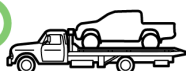

LUT0014EAM0

4WD

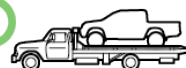

LUT0011EAM0

9. Important additional information

Gas-filled dampers are installed in the front and rear lower structural frame (near the bumpers).

Location of gas-filled dampers is shown in the mark **9** on page 1.



Driver's seat has a centre airbag in addition to the side airbag.

Location of centre airbag is shown in the mark **9** on page 1.



Do not apply excessive force to nor strongly hit the airbag installation area.

10. Explanation of pictograms used

	General warning sign		Corrosives		Seat height adjustment
	Warning; low temperature		Use water to extinguish the fire		Steering wheel, tilt control
	Flammable		Air-conditioning component		Device to shut down power in vehicle
	Hazardous to the human health		Remove smart key		Vehicle on fuel of liquid group 1
	Acute toxicity		Bonnet		Right hand drive
	Explosive		Seat adjustment, longitudinal		

	ID No.	Version No.	Version Date.	Page
	LBLCTDC-ANRS-EN03	01	2/2026	4/4