





MITSUBISHI TRITON
2 doors / 2 seats / Single Cab
(2024 -)

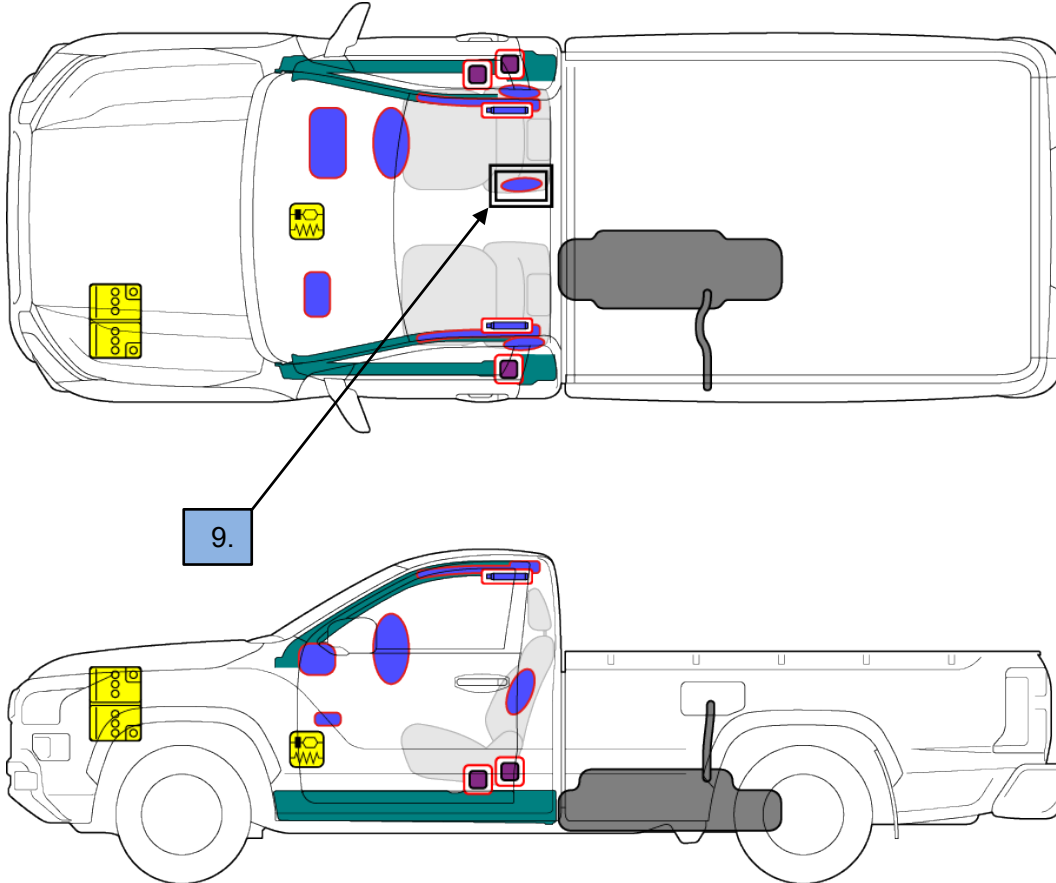

UTR000026AM0


	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		High strength Zone
	Zone requiring special attention		Battery low voltage		Fuel tank		Fuel tank content Diesel		
					ID No.	Version No.	Version Date.	Page	
					LBLCTSC-ANRS-EN01	01	11/2023	1/4	

1. Identification / recognition

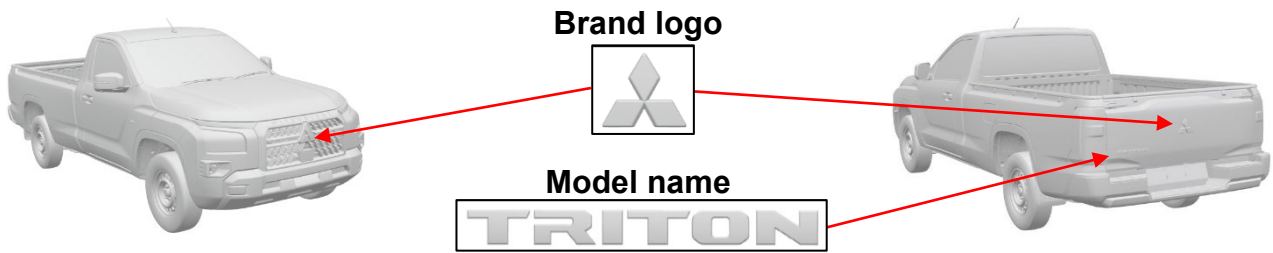


2. Immobilisation / stabilization / lifting


Immobilise the vehicle:

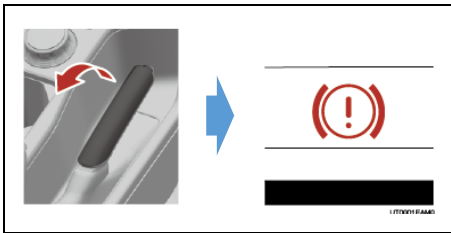

1. Block the wheels.
2. Set the parking brake.

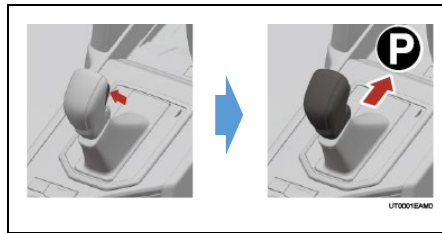

3. Automatic transmission:
Move the selector to the "P" position.

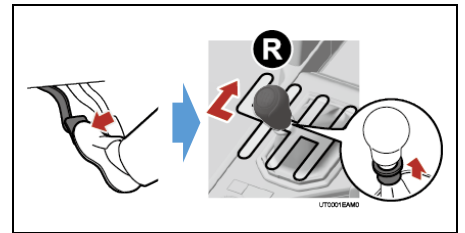




3. Manual transmission:
Move the gearshift to the "R" position.

Lifting points:

Front jacking points


Rear jacking points

Appropriate stabilisation-lifting points
Support positions for garage jacks

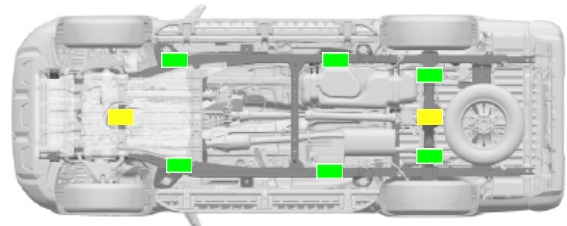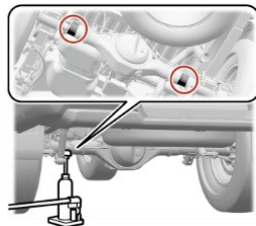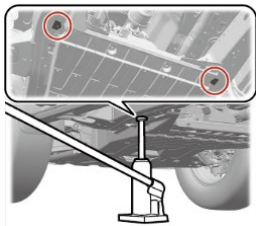


3. Disable direct hazards / safety regulations

Main disabling method:

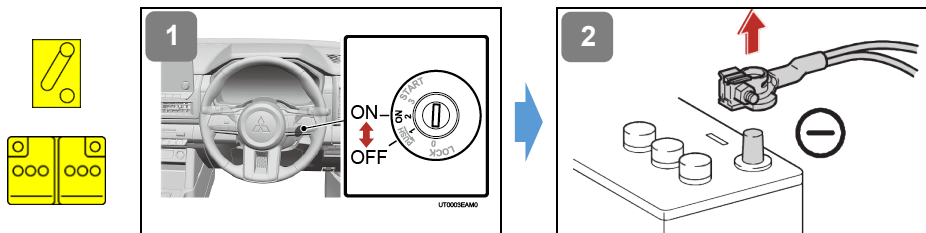

Access:

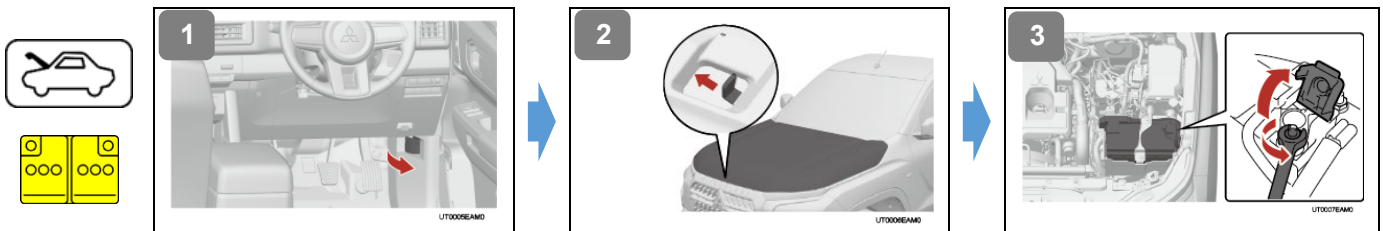



ID No.	Version No.	Version Date.	Page
LBLCTSC-ANRS-EN01	01	11/2023	2/4

4. Access to the occupants

Glass types:

A: Laminated glass

B: Tempered glass

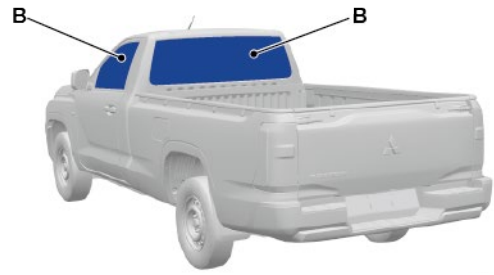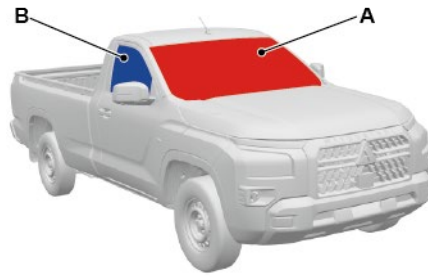

UTS0000EAM0

Seat adjustment:




Recline the seatback




UT0000EAM0

UT0000EAM0


Steering column adjustment:

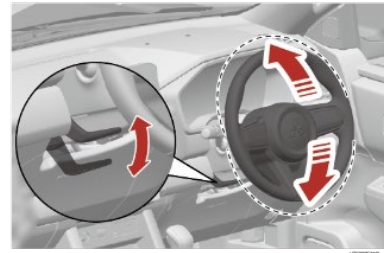

Telescopic mechanism

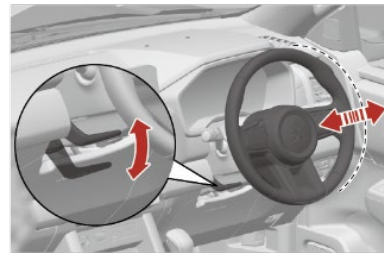

High strength steel in body:

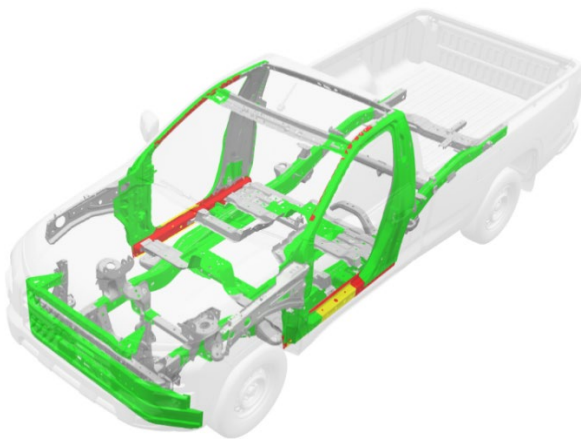

UTS0000EAM0

- 440 MPa
- 590 MPa
- 980 MPa
- 1180 MPa

5. Stored energy / liquids / gases / solids

		12 V
		HFC-134a: 530–570 g HFO-1234yf [R-1234yf]: 530–570 g
		75 L

	ID No. LBLCTSC-ANRS-EN01	Version No. 01	Version Date. 11/2023	Page 3/4
--	-----------------------------	-------------------	--------------------------	-------------

6. In case of fire



Use large amount of water



7. In case of submersion



Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage

Store at safe distance from other vehicles!


2WD



4WD



9. Important additional information

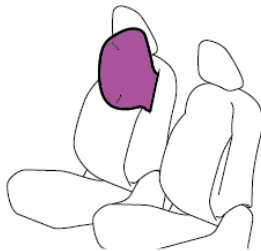

Driver's seat has a centre airbag in addition to the side airbag. Location of centre airbag is shown in the mark **9** on page 1.



Do not apply excessive force to nor strongly hit the airbag installation area.

10. Explanation of pictograms used

	General warning sign		Corrosives		Steering wheel, tilt control
	Warning; low temperature		Use water to extinguish the fire		Device to shut down power in vehicle
	Flammable		Air-conditioning component		Vehicle on fuel of liquid group 1
	Hazardous to the human health		Bonnet		Right hand drive
	Acute toxicity		Seat adjustment, longitudinal		
	Explosive		Seat height adjustment		

ID No.	Version No.	Version Date.	Page
LBLCTSC-ANRS-EN01	01	11/2023	4/4