




MITSUBISHI TRITON
4 doors / 5 seats / Double Cab
(2024 -)

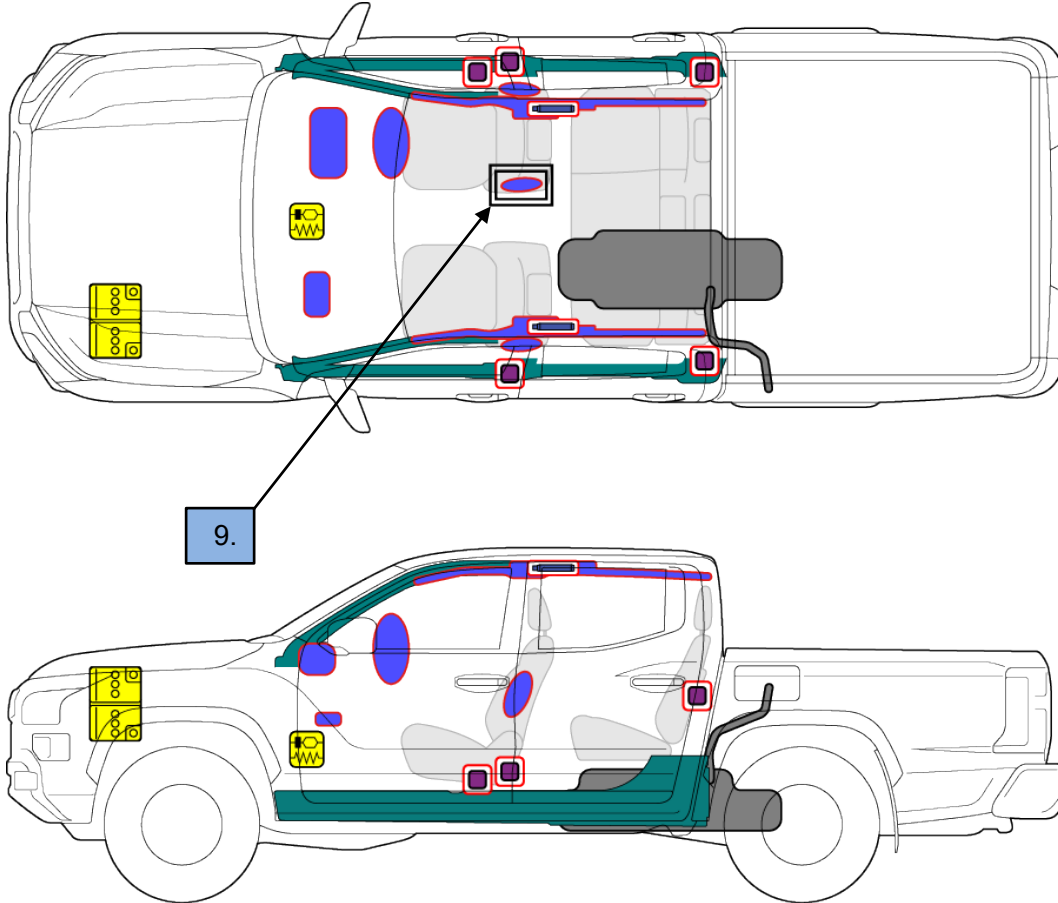


UTDC002EAMK

	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		High strength Zone
	Zone requiring special attention		Battery low voltage		Fuel tank		Fuel tank content Diesel		


ID No.	Version No.	Version Date.	Page
LBLCTDC-ANRS-EN01	01	11/2023	1/4

1. Identification / recognition

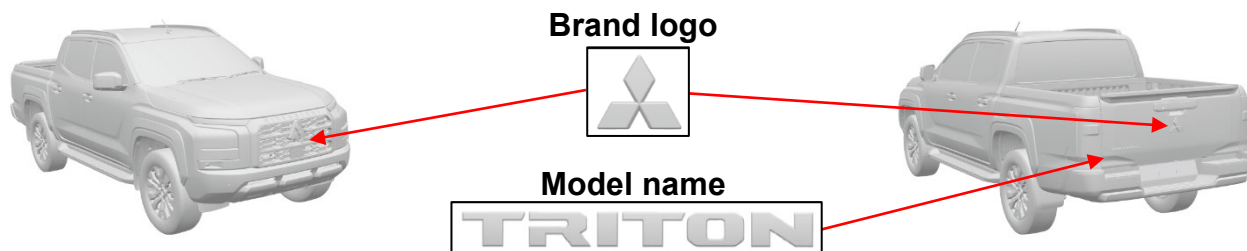


2. Immobilisation / stabilization / lifting


Immobilise the vehicle:

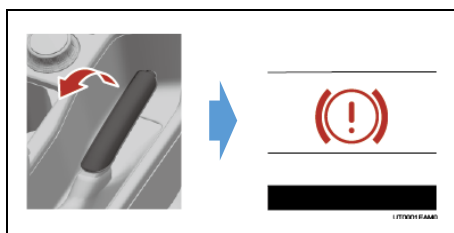

1. Block the wheels.
2. Set the parking brake.

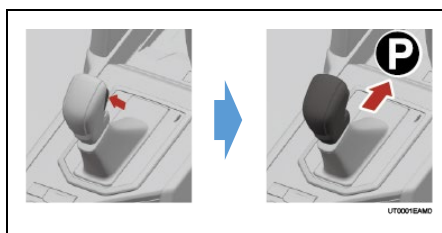


3. Automatic transmission:
Move the selector to the "P" position.

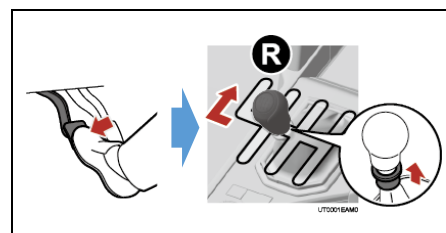


3. Manual transmission:
Move the gearshift to the "R" position.

Lifting points:


Front jacking points

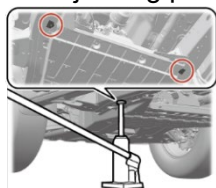

Rear jacking points

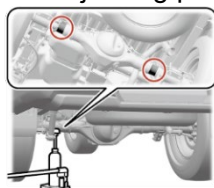


- Appropriate stabilisation-lifting points
- Support positions for garage jacks

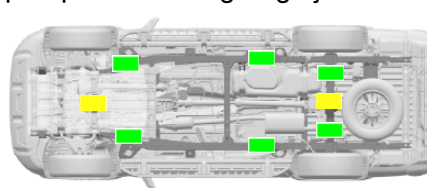


3. Disable direct hazards / safety regulations

Main disabling method:

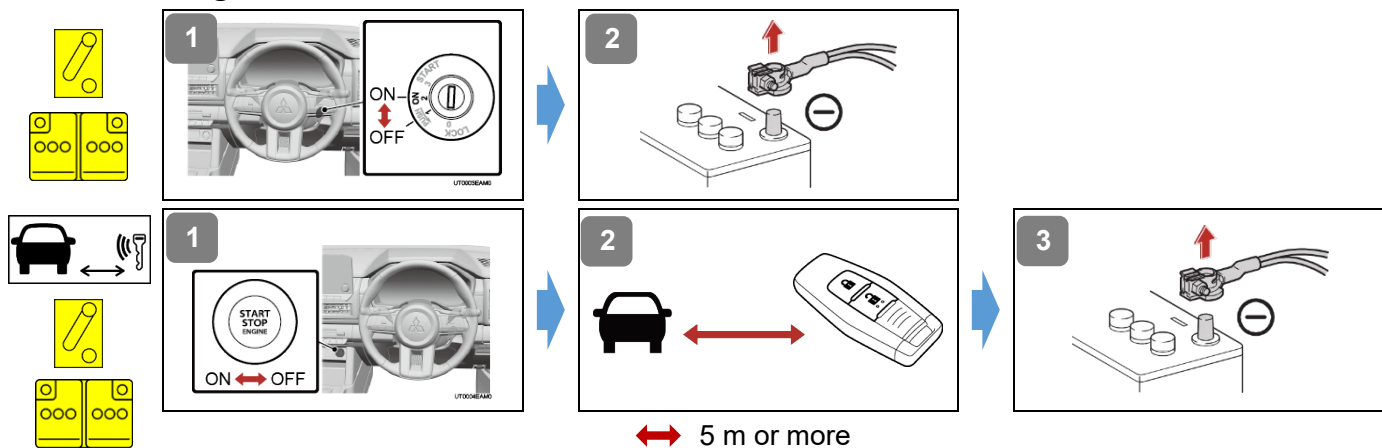

Access:

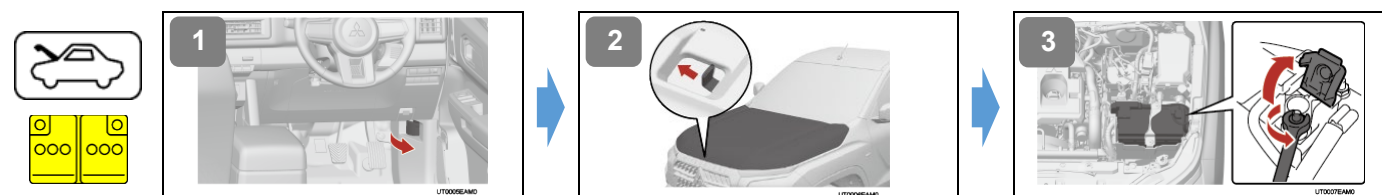



ID No.	Version No.	Version Date.	Page
LBLCTDC-ANRS-EN01	01	11/2023	2/4

4. Access to the occupants

Glass types:

A: Laminated glass

B: Tempered glass

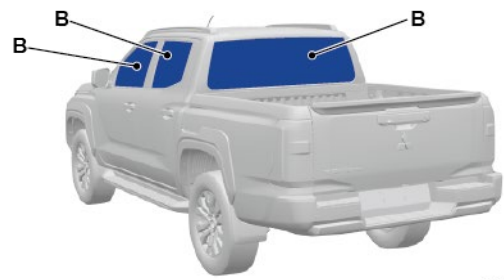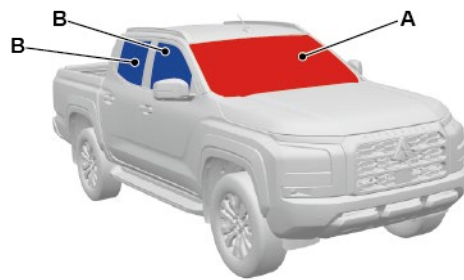

UTDC000EAM0

Seat adjustment:

Manual Seat



Recline the seatback




Power Seat




Recline the seatback




Steering column adjustment:

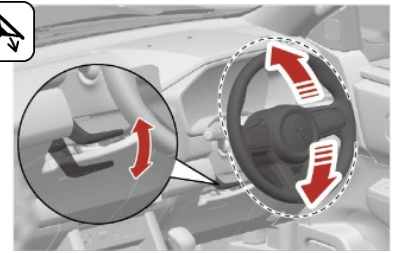

Telescopic mechanism

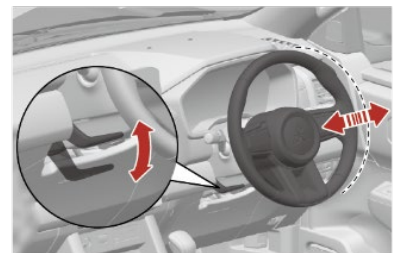

High strength steel in body:

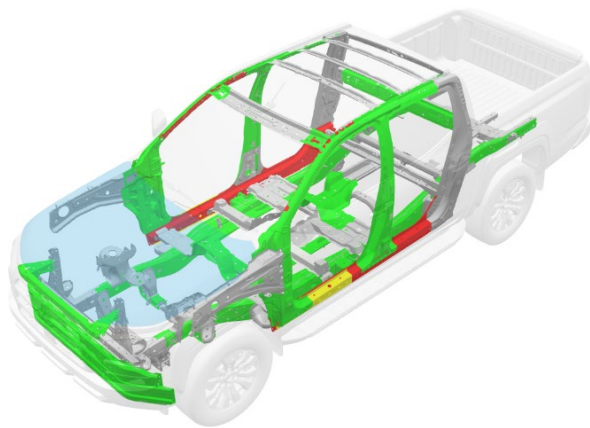

■ - 440 MPa

■ 590 MPa

■ 980 MPa

■ 1180 MPa

■ Aluminum

Used in the hood (4WD vehicles only)

UTDC000EAM0

5. Stored energy / liquids / gases / solids

		12 V
		HFC-134a: 530–570 g HFO-1234yf [R-1234yf]: 530–570 g
		75 L

	ID No. LBLCTDC-ANRS-EN01	Version No. 01	Version Date. 11/2023	Page 3/4
--	-----------------------------	-------------------	--------------------------	-------------

6. In case of fire



Use large amount of water



7. In case of submersion




Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage


Store at safe distance from other vehicles!

2WD




LIT0014EAM0

4WD



LIT0011EAM0

9. Important additional information

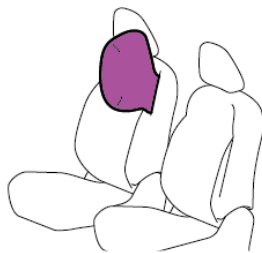

Driver's seat has a centre airbag in addition to the side airbag. Location of centre airbag is shown in the mark **9** on page 1.



Do not apply excessive force to nor strongly hit the airbag installation area.

10. Explanation of pictograms used

	General warning sign		Corrosives		Seat height adjustment
	Warning; low temperature		Use water to extinguish the fire		Steering wheel, tilt control
	Flammable		Air-conditioning component		Device to shut down power in vehicle
	Hazardous to the human health		Remove smart key		Vehicle on fuel of liquid group 1
	Acute toxicity		Bonnet		Right hand drive
	Explosive		Seat adjustment, longitudinal		

ID No.	Version No.	Version Date.	Page
LBLCTDC-ANRS-EN01	01	11/2023	4/4