




MITSUBISHI OUTLANDER PHEV

Body type: Station wagon

Type: GN0W Model year: 2025 -

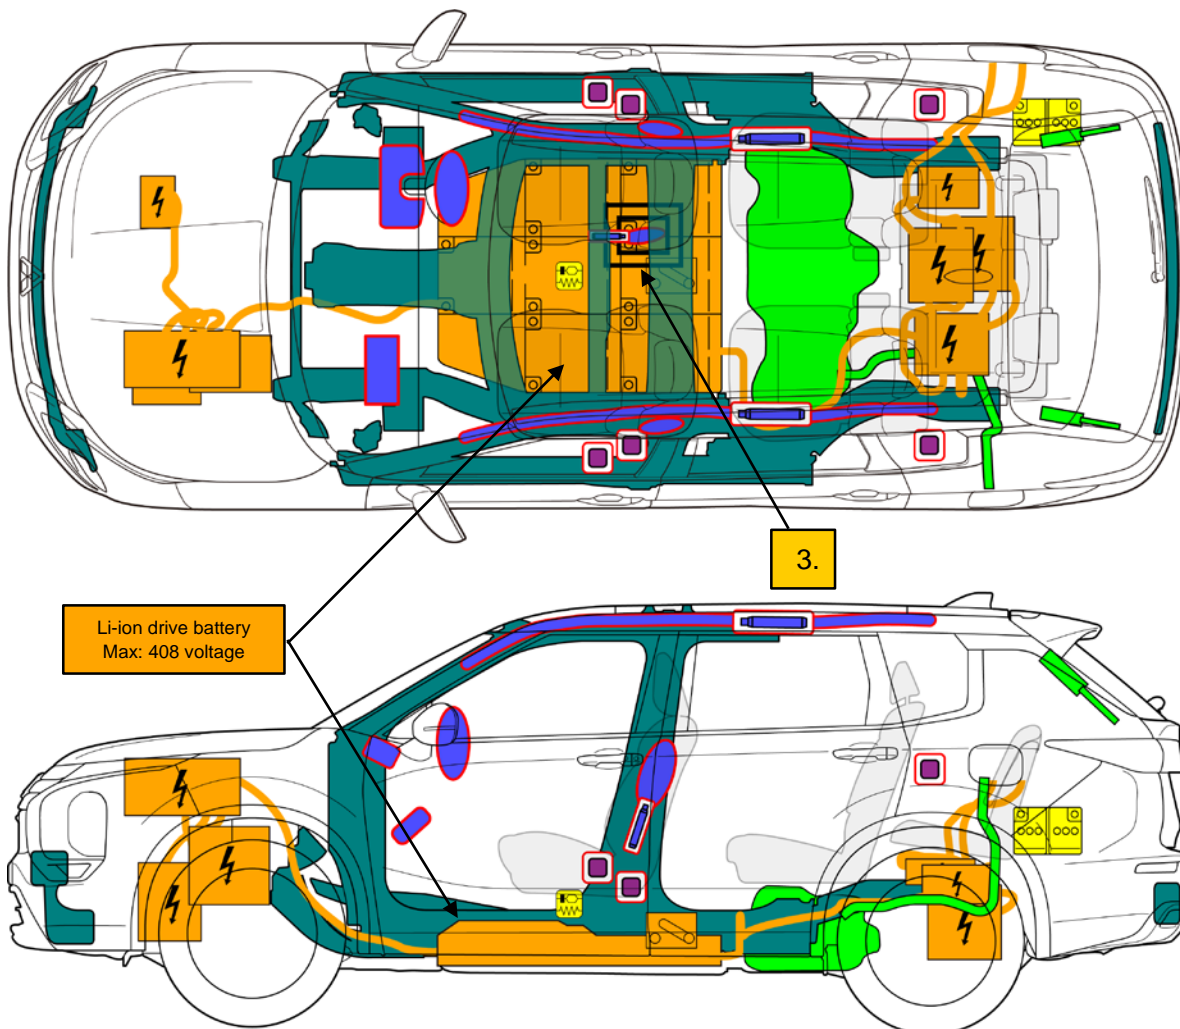

| | | | | | | | | | |
|---------------|--------------------------------------|--|--------------------------------------|--|-------------------------|---------------|--|--|-------------------------------------|
| | Air bag | | Stored gas inflator | | Seat belt Pretensioner | | SRS control unit | | Pedestrian protection active system |
| | Automatic rollover protection system | | Gas strut / Preloaded spring | | High strength Zone | | Zone requiring special attention | | |
| | Battery low voltage | | Ultra capacitor, low voltage | | Fuel tank | | Gas tank | | Safety valve |
| | High voltage battery pack | | High voltage power cable / component | | High voltage disconnect | | Fuse box disabling high voltage system | | Ultra capacitor, high voltage |
| ID No. | | | | | Version No. | Version Date. | Page | | |
| GNW-ANRS-EN01 | | | | | 01 | 05/2025 | 1/4 | | |



MITSUBISHI OUTLANDER PHEV



Body type: Station wagon

Type: GN0W Model year: 2025 -




1. Identification / recognition

Features on vehicle exterior

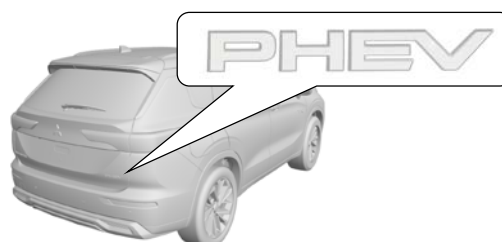

2. Immobilisation / stabilisation / lifting


Immobilise the vehicle

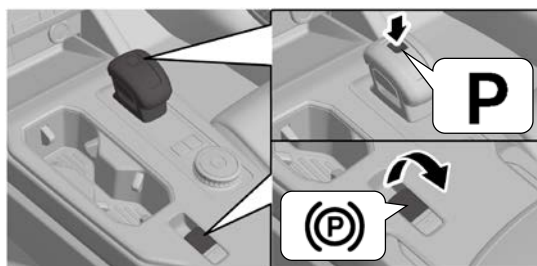

Block the wheels and set the parking brake. Put the vehicle in "P" position.

DE0238EAM0

Support positions for Jack and Lift

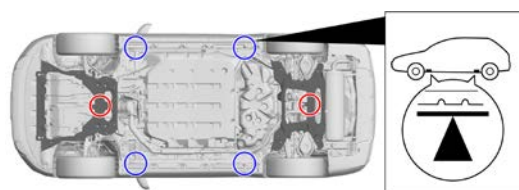

DE0196EAM0

○: Support position for Garage Jack

●: Support position for Jack or Axle stands or Lift

3. Disable direct hazards / safety regulations



Do not apply excessive force to not strongly hit the air bag installation area.

Driver's seat has the front seat-mounted SRS centre-air bag in addition to the side-air bag.

Location of the centre-air bag is shown in the mark **3** on page 1.



1. How to determine if vehicle is ON / OFF




DE0236EAM0




2. How to disconnect the 12V auxiliary battery negative terminal


Wait for 5 minutes after turning off the power mode of the electric motor switch, and closing the driver's door.

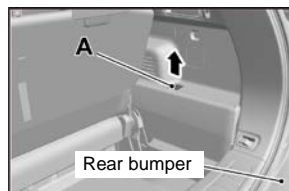

Rear bumper

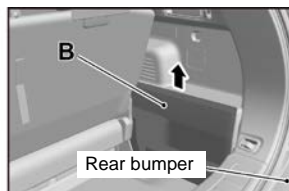

Rear bumper

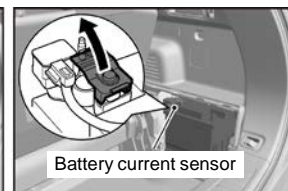


Battery current sensor

DE0216EAM0

< Use an open end wrench >




< Use a socket wrench >

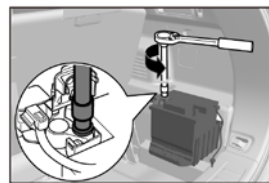

DE0217EAM0



3. How to disconnect the "Power unit control" fuse

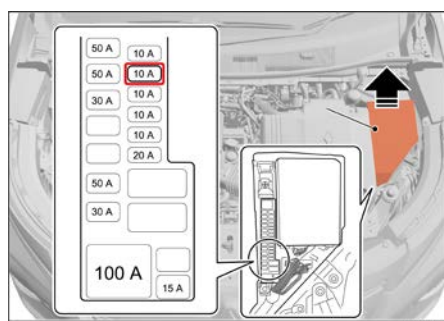

DE0218EAM0

If you cannot locate this fuse, remove all fuses and relays in the fuse box.




4. Use insulating Personal Protective Equipment (PPE) (Rubber insulating gloves, Rubber soled insulating)



5. How to shut down High voltage (pull out the service plug)


Wait for 5 minutes after disconnecting the 12V auxiliary battery negative terminal.

5m

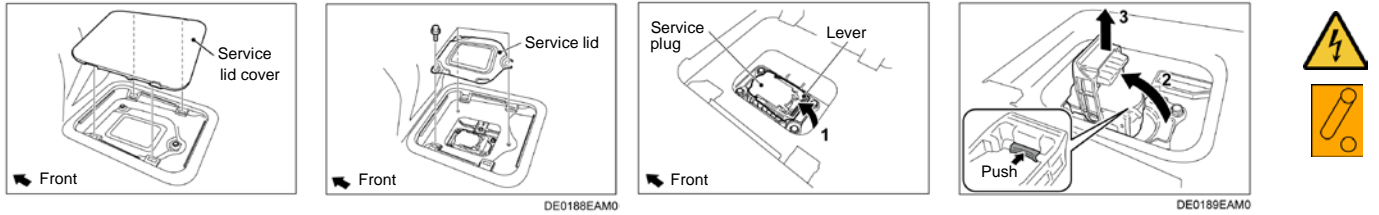


4. Access to the occupants


Windows

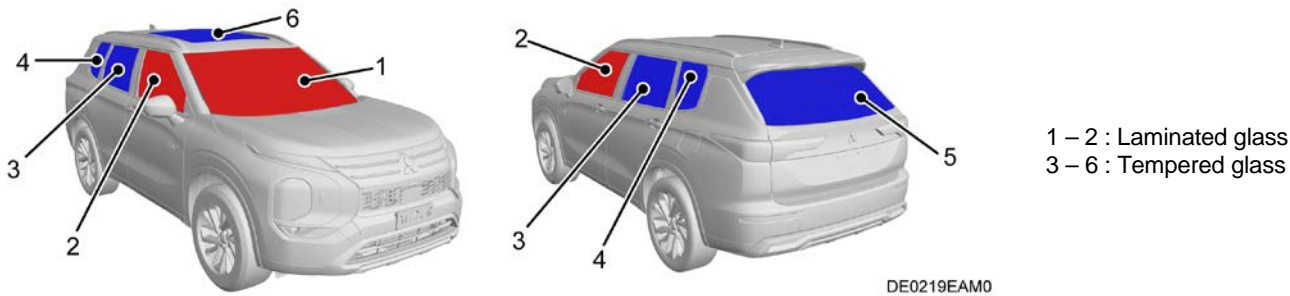

Steering adjustment

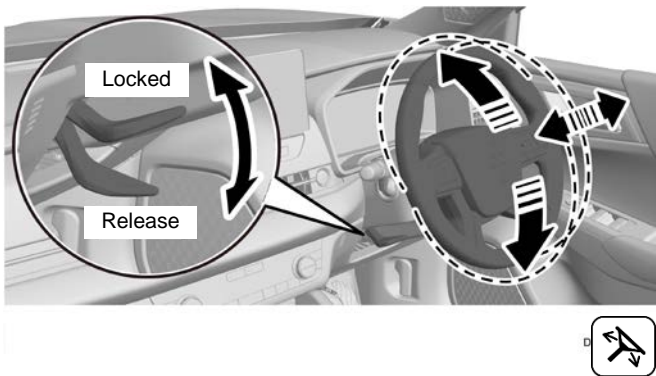


Seat adjustment

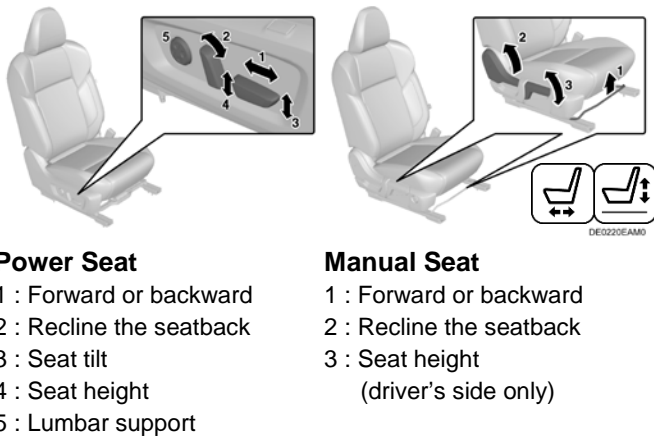


Vehicle CUT Zones

CUT ZONE

Risk of high voltage shock and air bag deployment

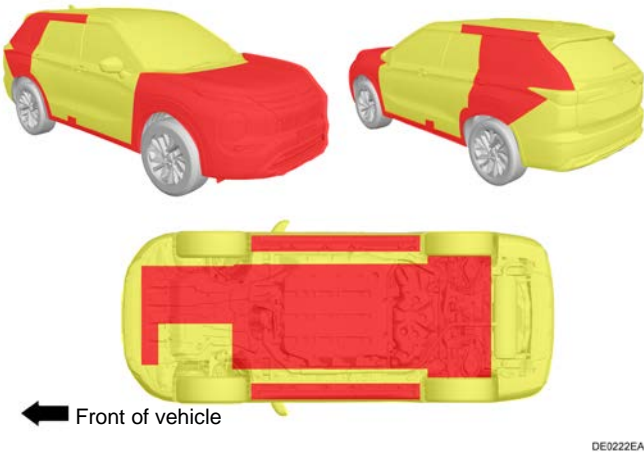

High-tensile and Ultra-high-tensile steel panels location

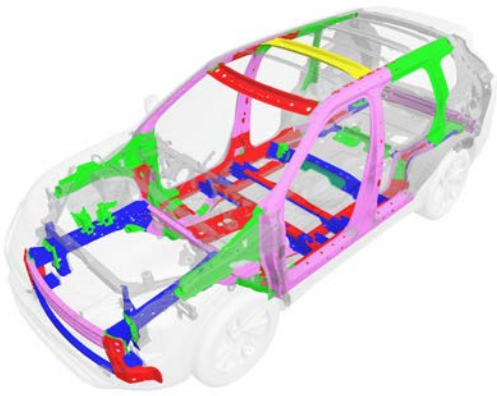



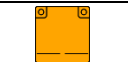

DE0123EAM0


| | | | |
|---|---|---------------------------------|---------------------------------|
| <div> <div>-440 MPa~</div> <div>1180 MPa</div> </div> | <div> <div>590 MPa</div> <div>1470 MPa</div> </div> | <div> <div>780 MPa</div> </div> | <div> <div>980 MPa</div> </div> |
|---|---|---------------------------------|---------------------------------|

| | | | |
|---|---|---|--|
|  | MITSUBISHI OUTLANDER PHEV Body type: Station wagon Type: GN0W Model year: 2025 - |  |  |
|---|---|---|--|

5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

| | | | | | |
|--|----------------------|------------------|---|-------------------------------|-------------------------------|
|  | Fuel tank | 53 liters |  | 12V auxiliary battery | 12V – L1 CONV (50 Ah / 420 A) |
|  | Li-ion drive battery | 355 V / 22.7 kWh |  | Refrigerant (air conditioner) | HFO-1234yf: 1,110 – 1,150 g |



6. In case of fire



Use large amount of water



RE-IGNITION POSSIBLE !



Never use seawater or any water containing salt.

7. In case of submersion

Submerged Vehicle

- If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.
- Then shut down the high voltage system. (Refer to **3-3. How to disconnect the “Power unit control” fuse** and **3-5. How to shut down High voltage (pull out the service plug)**)
- If the vehicle is submerged, the drive battery may generate flammable hydrogen gas.
- If the vehicle is submerged, water may enter the drive battery.



8. Towing / transportation / storage

How to Transport












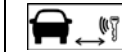










Store the vehicle at a safe distance from other vehicles.

9. Important additional information

For the detail, please refer to Emergency Response Guide.

10. Explanation of pictograms used

| | | | | | |
|--|--------------------------------|---|--------------------------------------|---|---|
|  | Keyless operation key distance |  | Warning, electricity |  | Risk of damaging human health |
|  | Caution |  | Warning, low temperature |  | Risk of flammability |
|  | Lifting point |  | Device to shut down power in vehicle |  | Risk of an explosion |
|  | Open Hood |  | Seat adjustment, longitudinal |  | Risk of corrosive material / substances |
|  | Open Tailgate |  | Seat height adjustment |  | Risk of acute toxicity |
|  | Steering wheel, tilt control |  | Air-conditioning component |  | Use water to extinguish the fire |
|  | Fuel tank |  | Use thermal infrared camera | | |
| | | | ID No. GNW-ANRS-EN01 | Version No. 01 | Version Date. 05/2025 |
| | | | | | Page 4/4 |